


Cattle Guard Installation Instructions

- Excavate 12” longer and wider than cattle guard with a minimum depth of 12”
- Fill with at least 4” of clean gravel, (2” or larger), for drainage.
- Set guard flat on gravel base ensuring the entire cattle guard makes contact with the base rock. Do not suspend cattle guard.
- Re-grade with fresh gravel or road base.

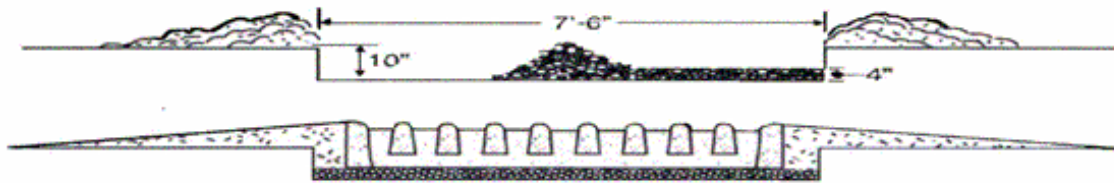

Note: Cattle Guards can be installed flat on ground and graded up to or recessed as shown.



Excavation Instructions

Delivery available on all products.



Accepted.

1.888.262.7383 | www.siprecast.com